

# LX Zeus System reset


## 1 General

System reset is a procedure which could help after system malfunctioning is detected and the unit is not operable.

After system reset a normal **FW update** should be carried out, so it is recommended to prepare an update file on USB stick.

## 2 Procedure

The procedure is very similar to FW update procedure, so press and keep pressed Vario button, switch the unit ON and wait until update screen will appear.

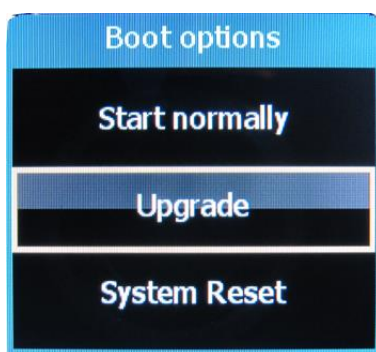

### 2.1 Executing system reset

Select System Reset and press enter on Zeus (Zoom knob), a PW request will follow.

Input PW: **49046**

A very typical message **Success** shows that the action has been successful carried out.

### 2.2 After System Reset

After system, reset is the unit not operable and to make it operable a FW upgrade is necessary.

### 2.3 What will be lost after System Reset

After system reset the memory of the unit will be deleted and formatted new.


In general, following will be lost:

- all user settings incl. layouts (set to default after reset)
- the data base
- calibration data of: AHRS, compass


#### 2.3.1 Which data can be saved before System reset

Some data is possible to be downloaded to USB stick and after Reset those data can be uploaded again.


-saving of pilot personal data:  
(Setup / Pilot)

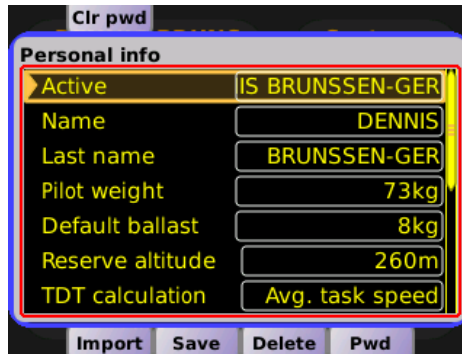


-saving of Layout data  
(Setup/Layout)

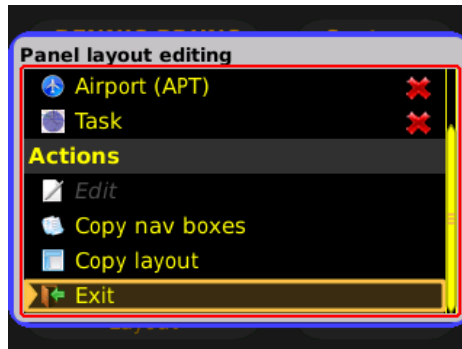

-task and TP data:  
(Setup/Transfer/Turnpoints and Tasks)

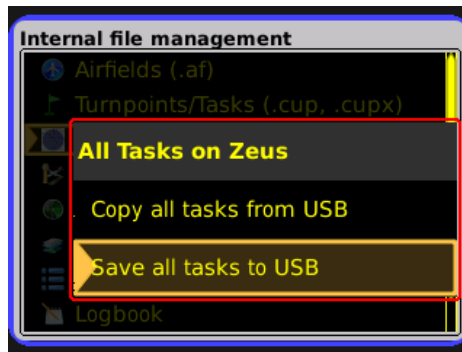

-check list:  
(Setup / Transfer)

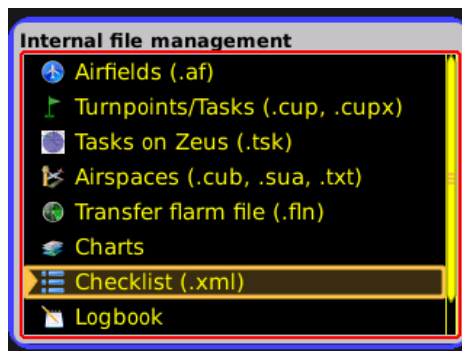

Tkalska 10  
SI 3000 Celje  
Tel.: 00 386 3 490 46 70  
Fax.: 00 386 3 490 46 71  
[support@lxnavigation.si](mailto:support@lxnavigation.si)  
[www.lxnavigation.si](http://www.lxnavigation.si)